


Base Blind Corner Assembly Instructions


Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

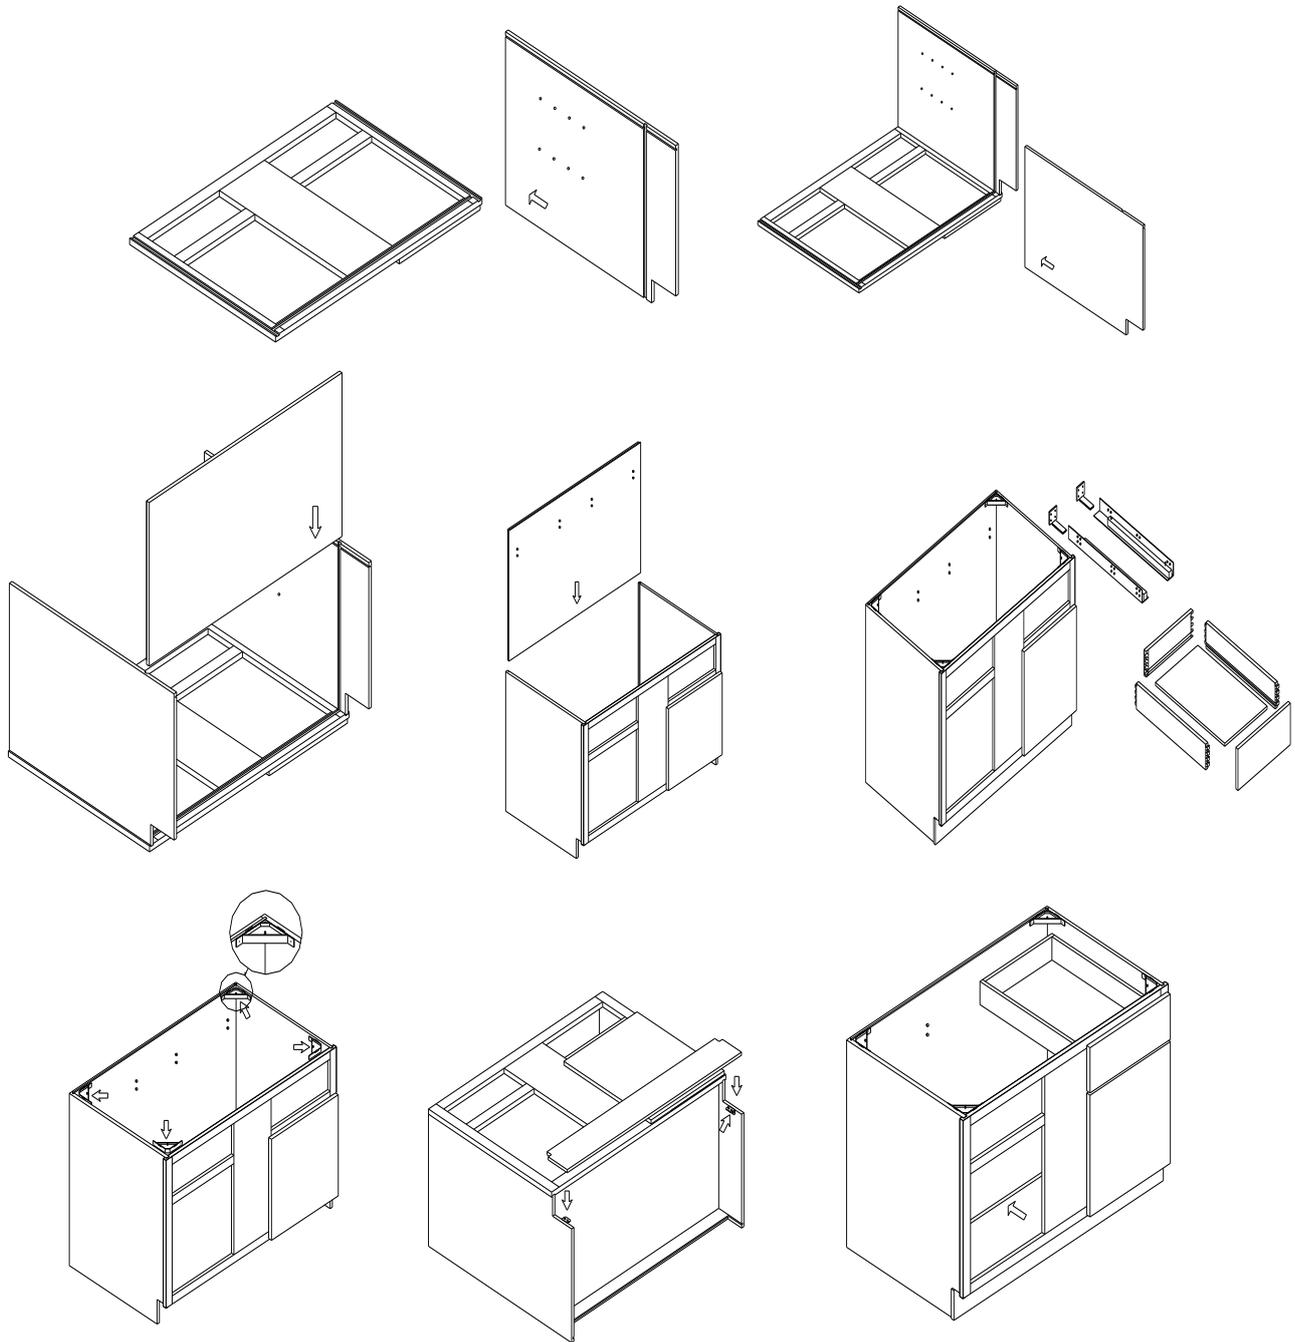

1. Slide the two side panels into the grooves of the FACE FRAME.
2. Next slide in the bottom panel. Make sure the panel is pushed as far down as it can go.
3. Attach the grey brackets onto the back panel and slide it into the grooves on the backside of the side panels. Start from the top and push down toward the bottom of the cabinet.
4. Assemble the drawer using wood glue and a rubber mallet. Then slide the rails into the brackets on the back panel and screw the front of the rails into the face frame.
- 5. Put the assembled drawer onto the slides right away on the side where cabinet is exposed.**
6. Add on the toe kick onto the bottom of the cabinet.
7. (Optional)- Screw on plastic corner brackets.
8. Attach the hinges onto the door and then mount it onto the middle part of the face frame.

Base Cabinet Instructions

Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

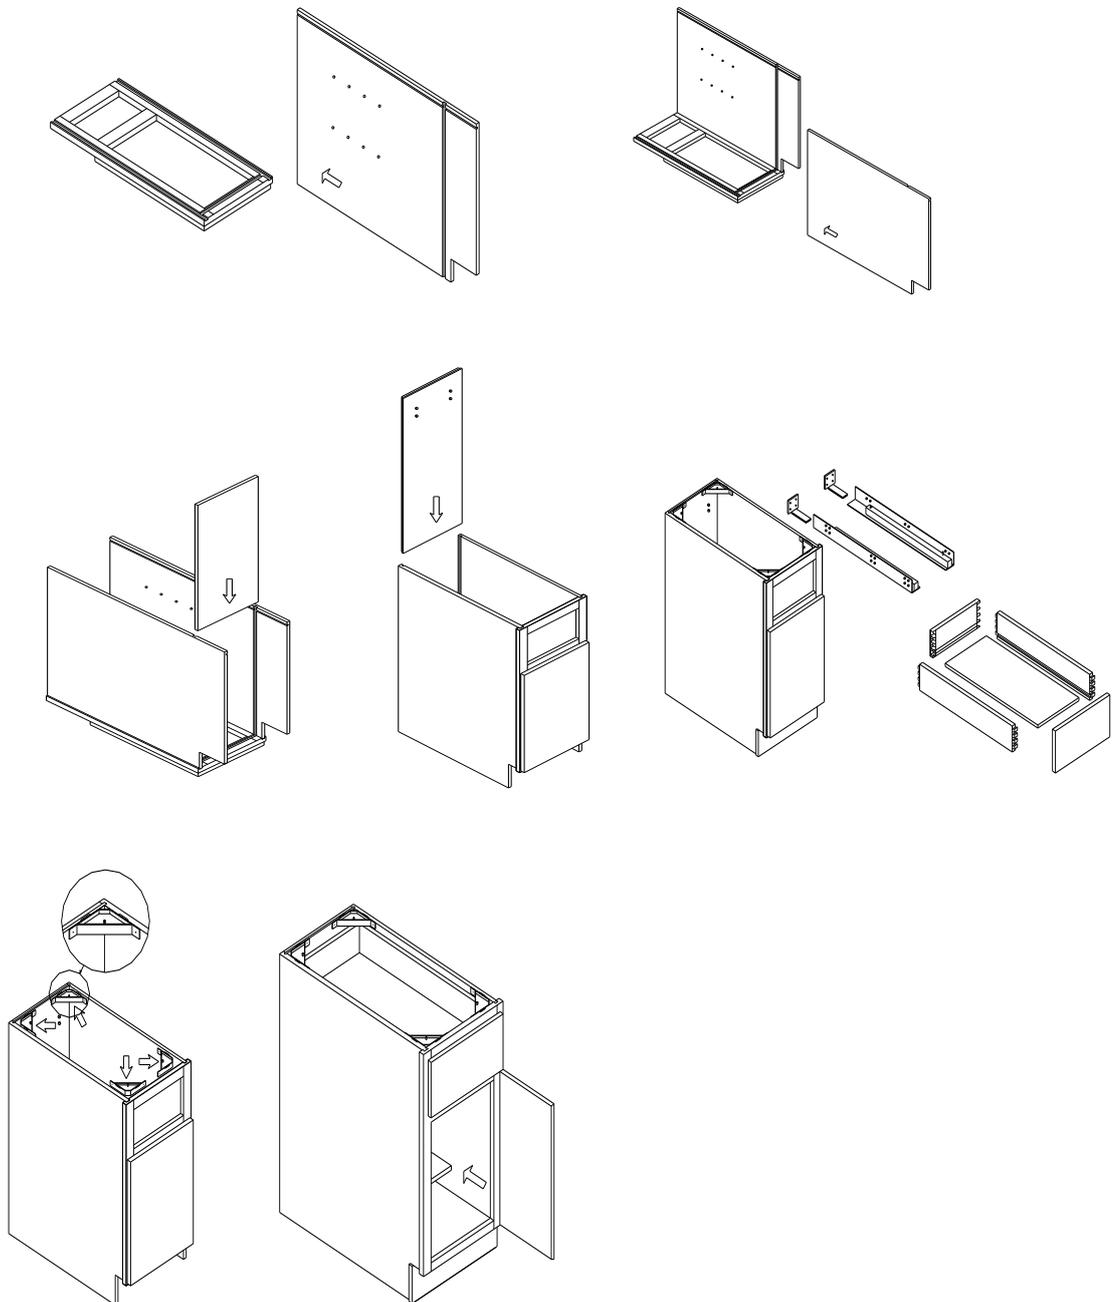



1. Slide the two side panels into the grooves of the FACE FRAME.
2. Next slide in the bottom panel. Make sure the panel is pushed as far down as it can go.
3. Attach the grey brackets onto the back panel and slide it into the grooves on the backside of the side panels. Start from the top and push down toward the bottom of the cabinet.
4. Assemble the drawer using wood glue and a rubber mallet. Then slide the rails into the brackets on the back panel and screw the front of the rails into the face frame.
5. Add on the toe kick onto the bottom of the cabinet.
6. (Optional)- Screw on plastic corner brackets.
7. Add in shelf clips and put in shelf.

Base Lazy Susan Assembly Instructions

Tools Required: Drill, Rubber Mallet, Another Person

Optional: Nail guns, Staplers, Wood Glue

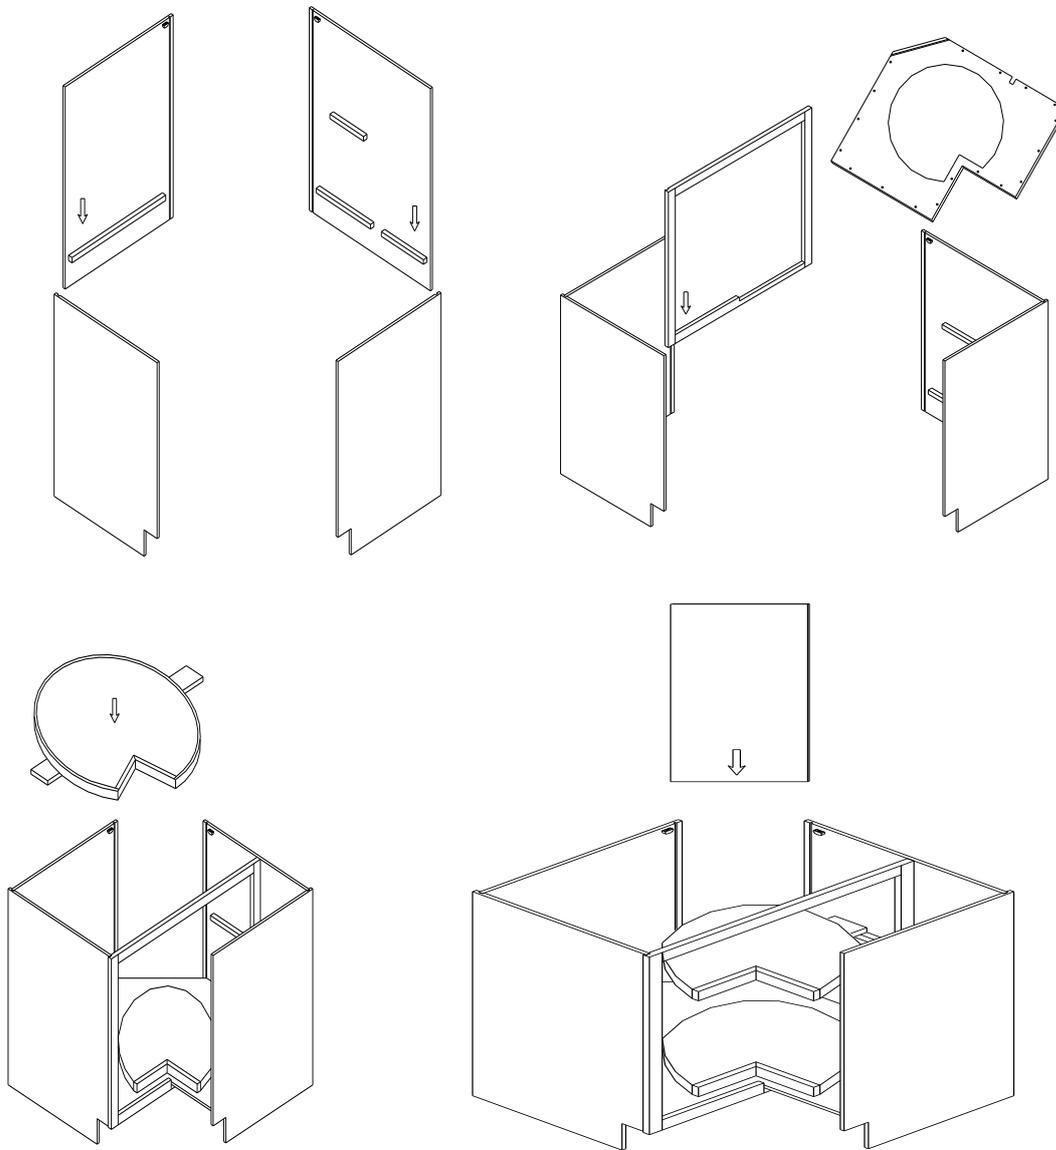

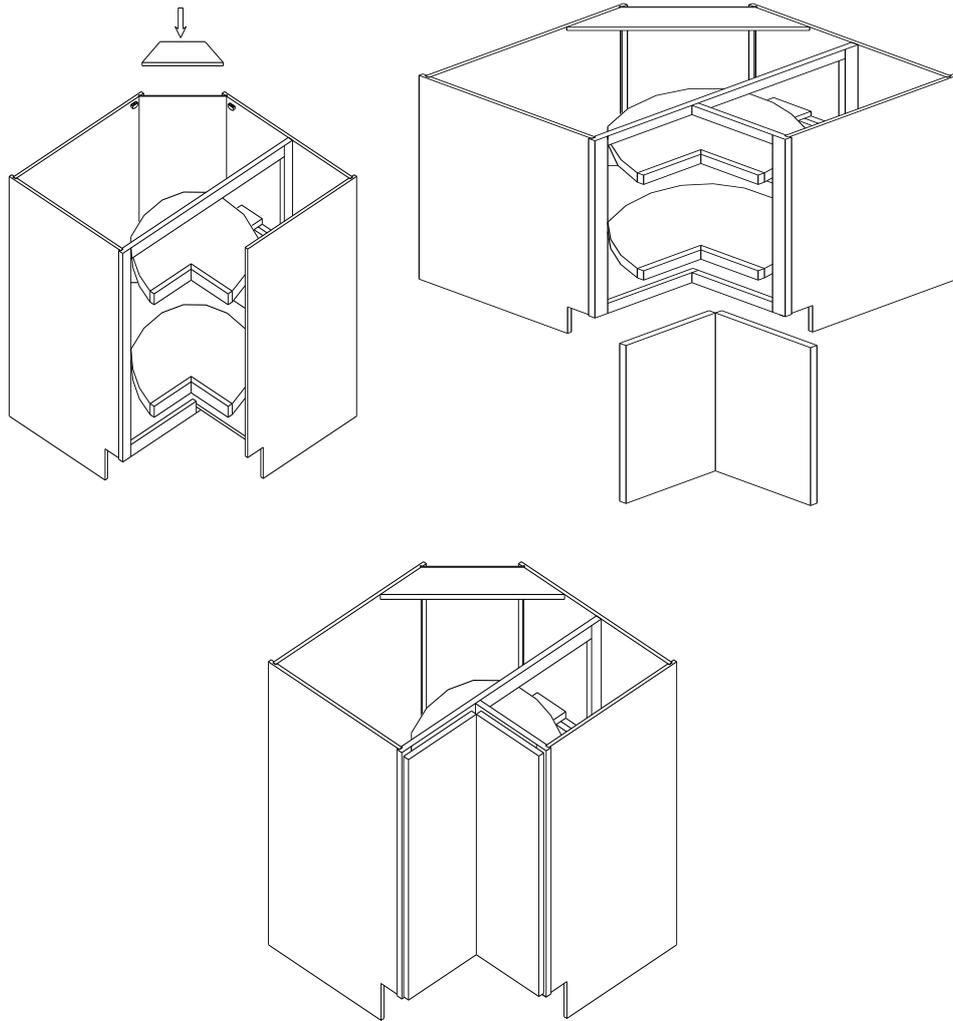


1. First attach the side panels together. The wooden piece attached to the side panels should be at the bottom for all the panels.
2. Next slide the large square frame onto the front of the left set side panels. Slide the C-Frame onto the right set of side panels.
3. Now carefully set in the large plate with one spinning shelf pre-attached to it.
4. Push the side panels together towards the large plate. Make sure the grooves in the back are perfectly flush.
5. Next slide in the thin back plate into that groove. Combine both side panels using the trapezoid connector piece with L-Brackets.
6. Attach the C-Frame onto the square frame with an L Bracket and attach the square frame onto the side panel using the long screws.
7. Mount the spinning shelf onto the rectangular board with the black spinning hardware plate. Attach it onto the side panels LAST.
8. Next screw the hinges onto the doors and attach the doors onto the square frame.
9. Now set the entire Lazy Susan off on one of the side panels and attach the toe kicks using 3 L-shaped brackets.

Now set in the middle shelf of the Lazy Susan and screw it onto the ledges on the side panels using the long screws.

Base Spice Rack Instructions


Items Needed: Drill, Tape Measure (Optional)- Nail Guns, Wood Glue, Stapler

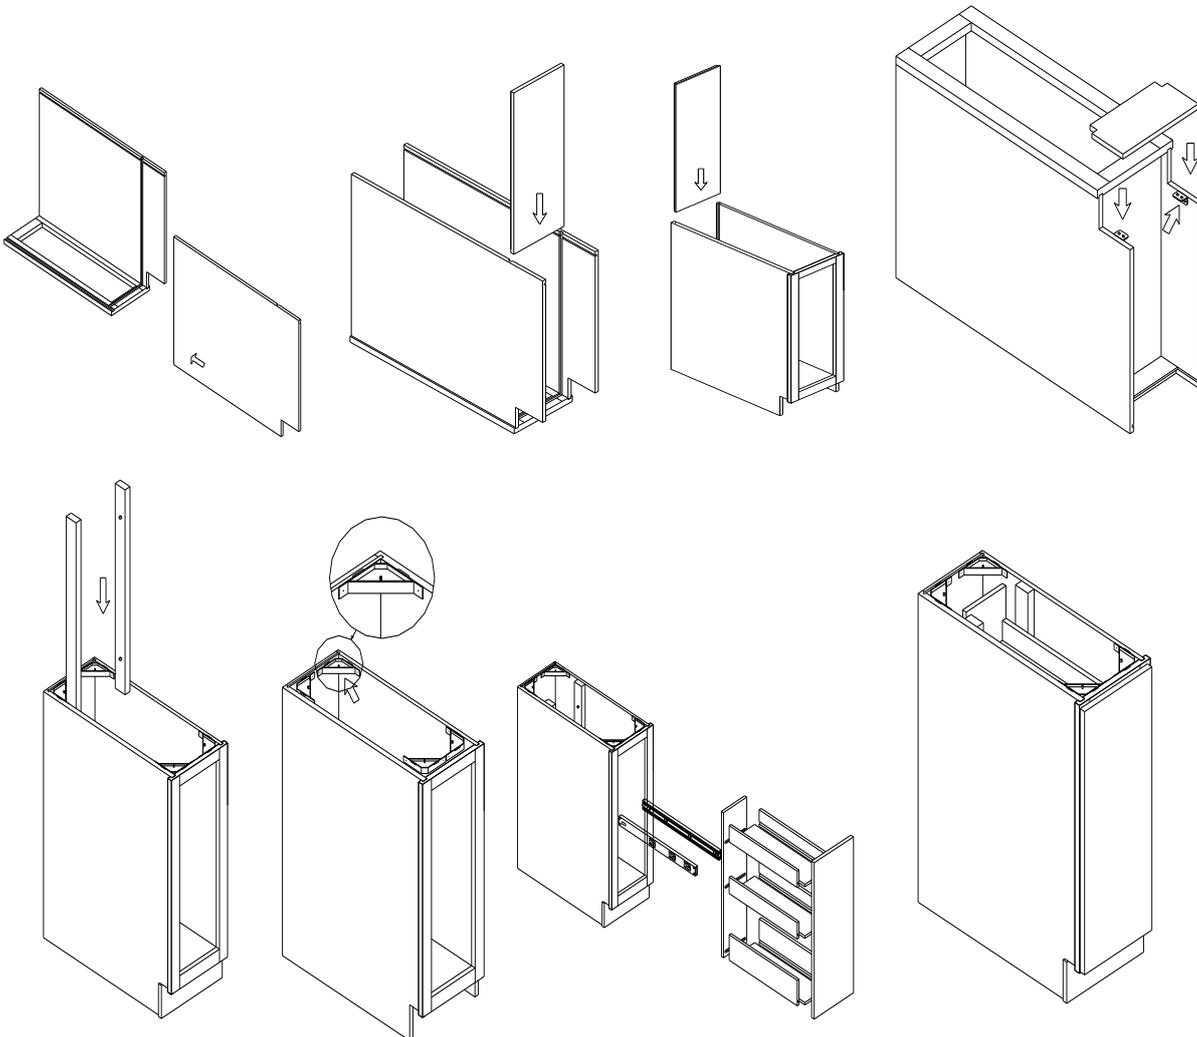

1. Slide the two side panels into the grooves of the FACE FRAME.
2. Next slide in the bottom panel. Make sure the panel is pushed as far down as it can go.
3. Attach the brackets onto the back panel and slide it into the grooves on the backside of the side panels. Start from the top and push down toward the bottom of the cabinet.
4. Add on the toekick onto the bottom of the cabinet.
5. Measure the middle of the brackets and mark it that length on the faceframe.
6. Split the metal rails by expanding them and pushing up on a small lever while pulling.
7. Slide in the metal rails and attach them on the faceframe at the marked location.
8. (Optional)- Screw on plastic corner brackets.
9. Screw together the Spice holder shelves. Largest side panels go at the bottom. End panel with 4 small predrilled holes faces out.
10. Drill the other half of the rails onto the middle of the shelves and slide it into the rails. Use the tape measure for this step to make sure it is the same distance on both sides.
11. Push the door onto the face frame and adjust to the appropriate height as other cabinets.
12. There are 4 small predrilled holes on the end panel of the shelves. Screw on 4 of the longer screws from the shelf panel side into the door.

Base Wastebasket Assembly Instructions


Items Needed: Drill, Tape Measure (Optional)- Nail Guns, Wood Glue, Stapler

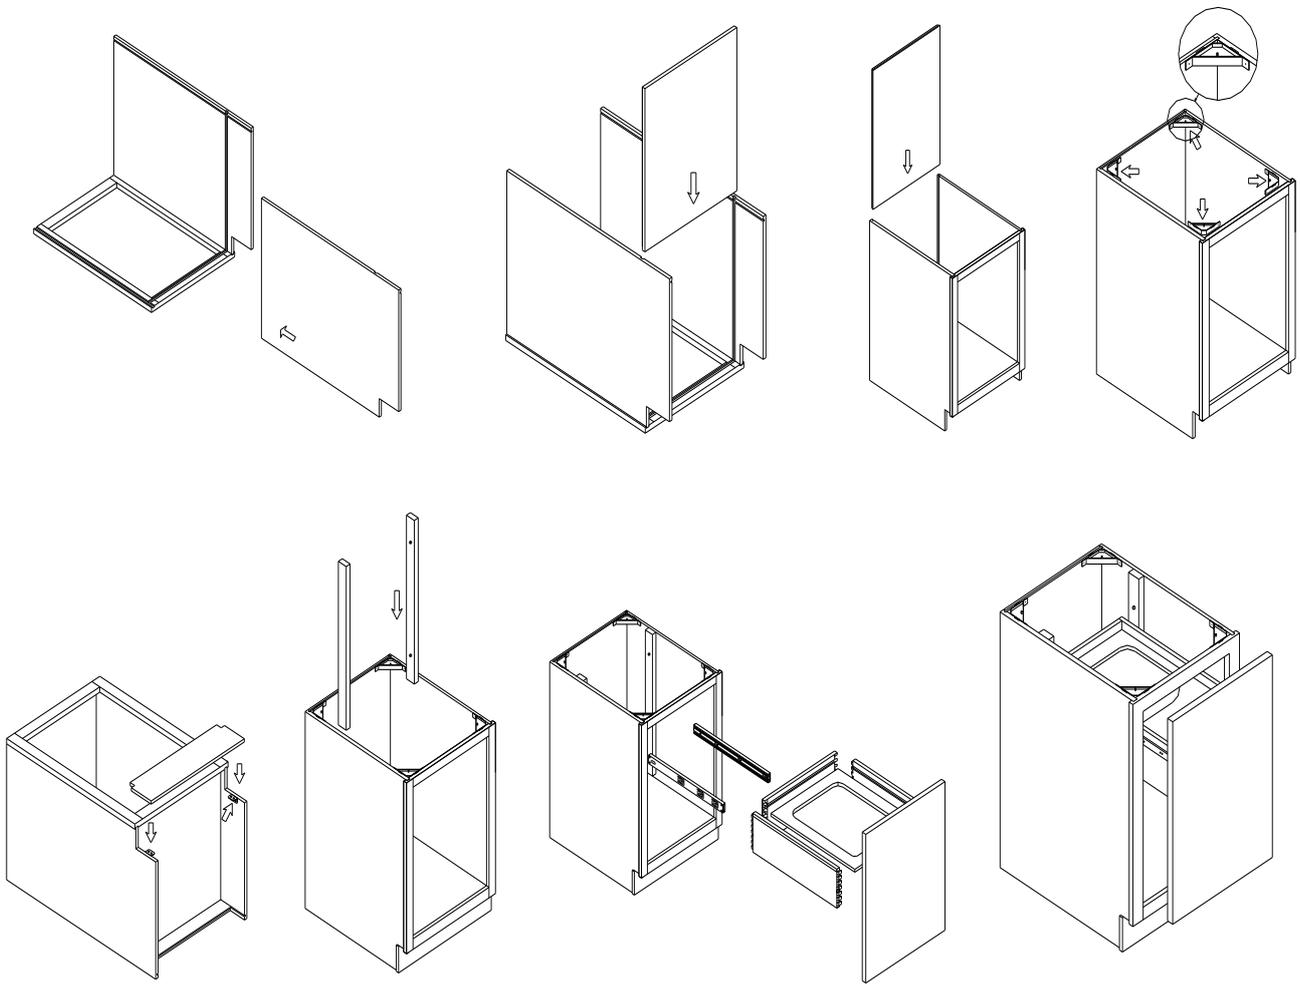

1. Slide the two side panels into the grooves of the FACE FRAME.
2. Next slide in the bottom panel. Make sure the panel is pushed as far down as it can go.
3. Slide down the back panel.
4. Use a tape measure and mark 9.5 inches onto the side panel and face frame on both sides.
5. Attach the two long pieces of wood onto the side panels with the middle being at the 9.5 inch mark so when the rails are added in, the back and front will be the same height.
6. Split the metal rails by expanding them and pushing up on a small lever while pulling.
7. Assemble the drawer using wood glue and a rubber mallet. Then drill in the rails into the wood pieces on the side panels and screw the front of the rails into the face frame.
8. On the assembled wastebasket drawer, mark 9 1/8 on both the side panels, and drill on the other half of the rails. Slide the wastebasket drawer into the rails.
9. Add on the toe kick onto the bottom of the cabinet.
10. (Optional)- Screw on plastic corner brackets.

Drawer Base Assembly Instructions


Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

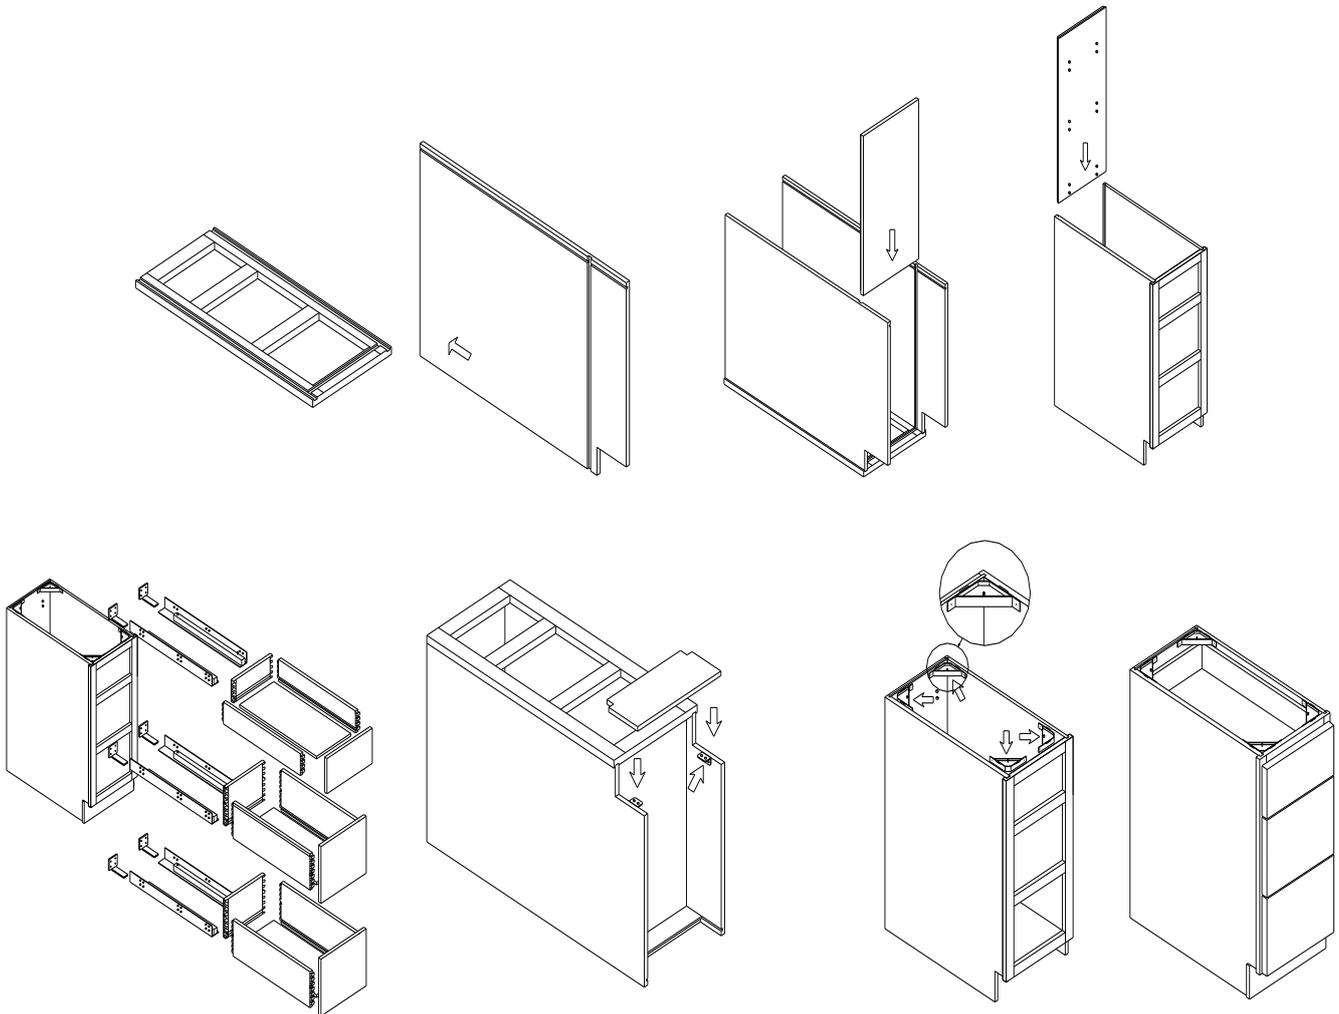

1. Slide the two side panels into the grooves of the FACE FRAME.
2. Next slide in the bottom panel. Make sure the panel is pushed as far down as it can go.
3. Attach the grey brackets onto the back panel and slide it into the grooves on the backside of the side panels. Start from the top and push down toward the bottom of the cabinet.
4. Assemble the drawer using wood glue and a rubber mallet. Next slide the rails into the brackets on the back panel and screw the front of the rails into the face frame. X3
5. Put the drawers onto the rails.
6. Add on the toe kick onto the bottom of the cabinet.
7. (Optional)- Screw on plastic corner brackets.

Oven Cabinet Assembly Instructions


Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver, wood glue (Optional)- Nail Guns, Stapler

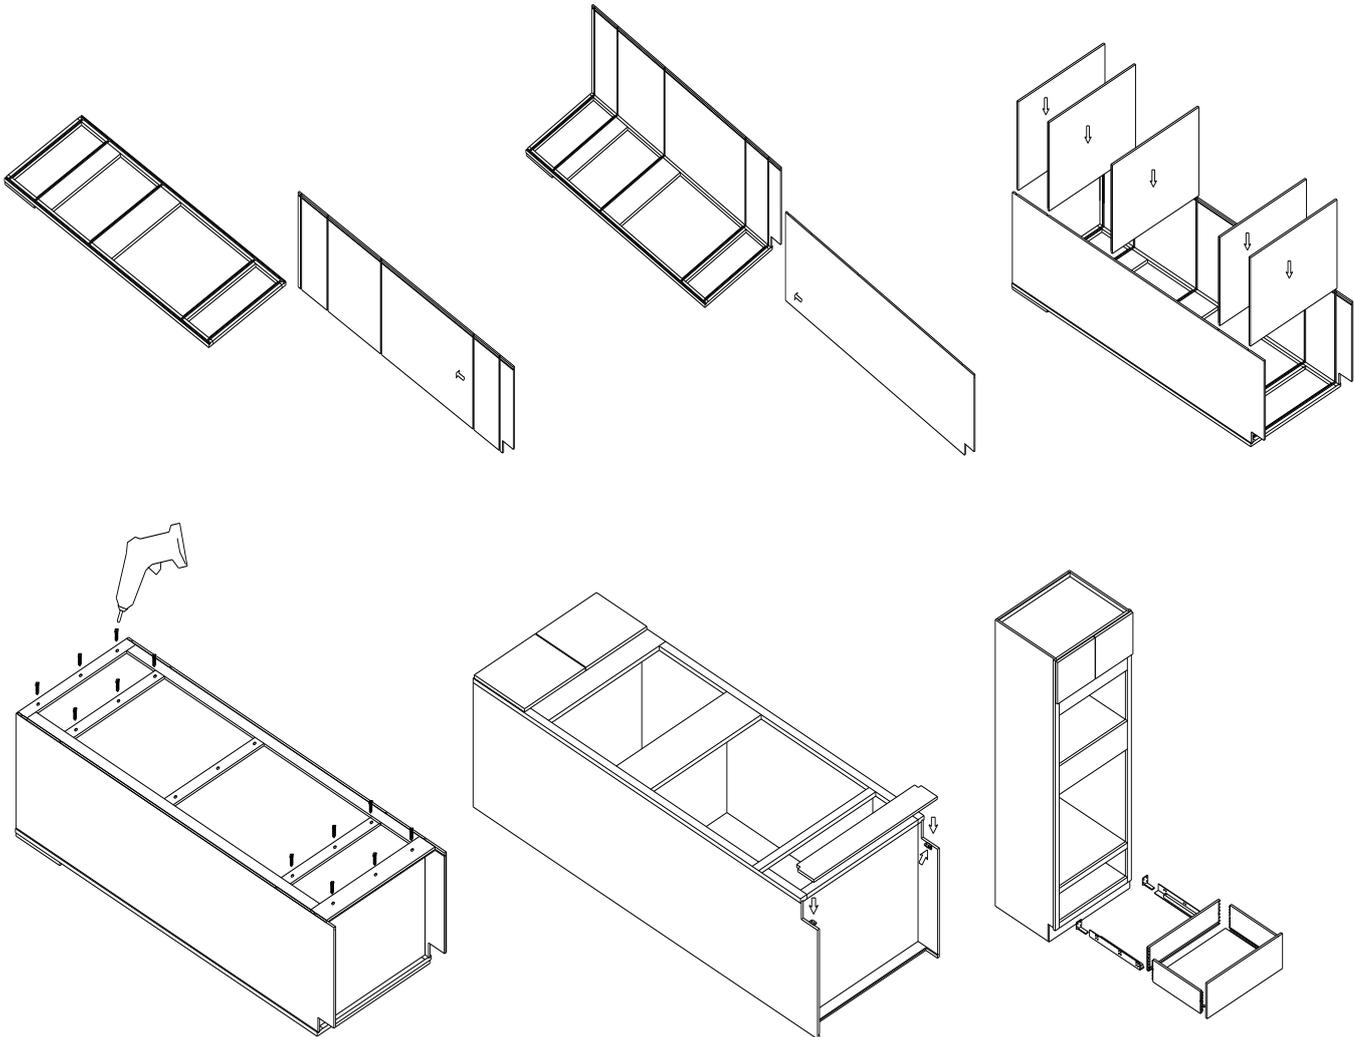

1. Slide in both side panels into the face frame.
2. Insert the five panels into the precut grooves and push them all the way down. They are thinner than the shelves.
3. Add on the back panel by slightly pulling apart the side panels so it will fit into the grooves.
4. Make sure the back panel is fully pushed down. Drill in screws to secure the back panel to the rest of the cabinet.
5. Add on toe kick using L-shaped brackets.
6. Assemble the drawer and install the drawer glides

Pantry Cabinet Assembly Instructions


Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

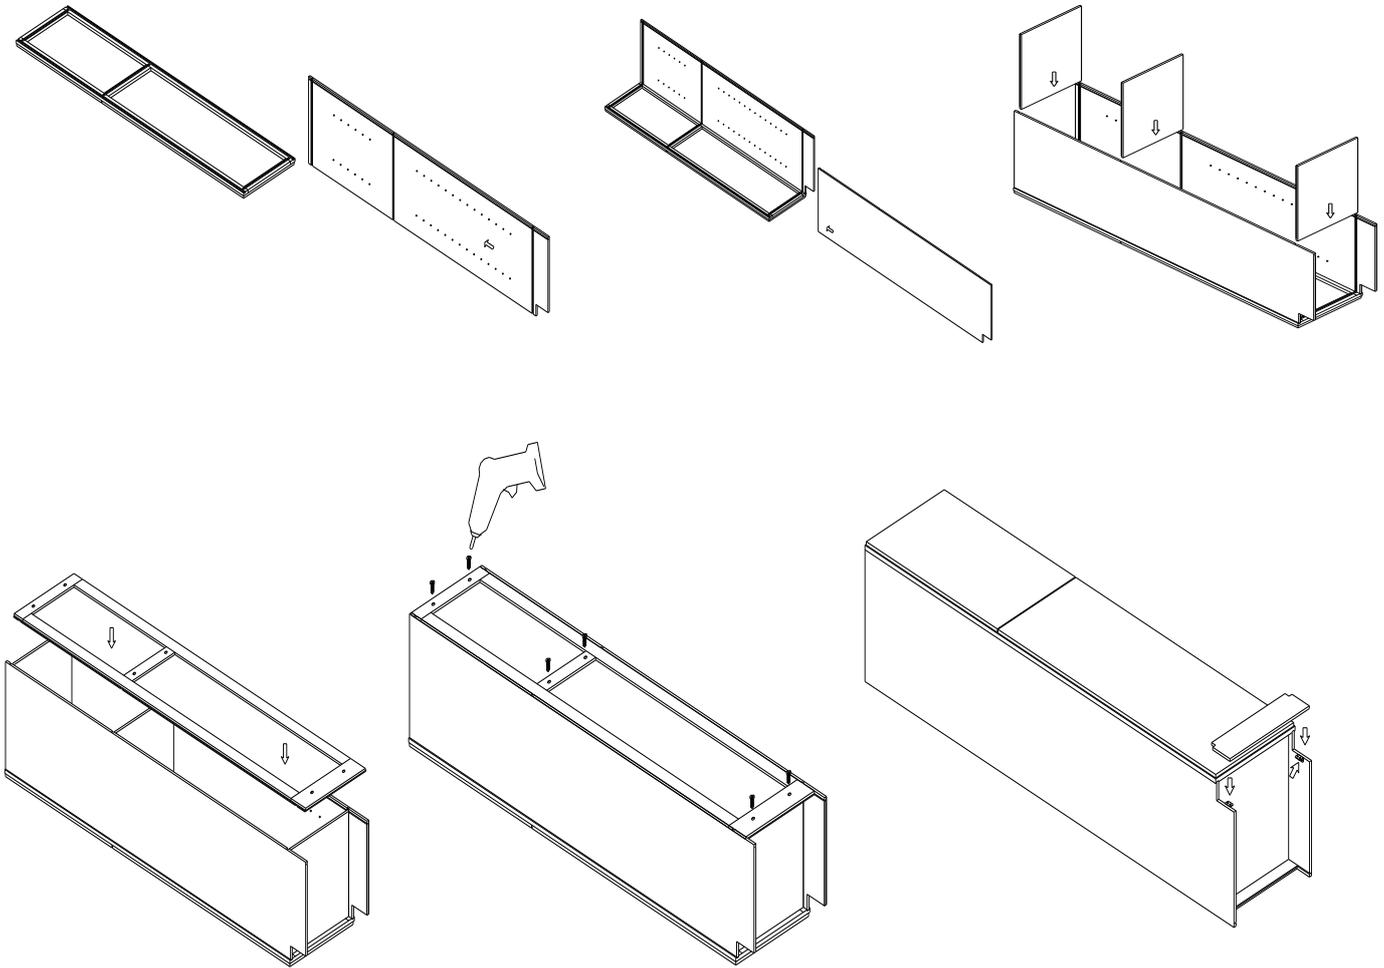

1. Slide in both side panels into the face frame.
2. Insert the three panels into the precut grooves and push them all the way down. They are thinner than the shelves.
3. Add on the back panel by slightly pulling apart the side panels so it will fit into the grooves.
4. Make sure the back panel is fully pushed down. Drill in screws to secure the back panel to the rest of the cabinet.
5. Add on toe kick using L-shaped brackets.
6. Insert shelf pins into the holes within the cabinet and add in shelves.

Vanity Cabinet Assembly Instructions


Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

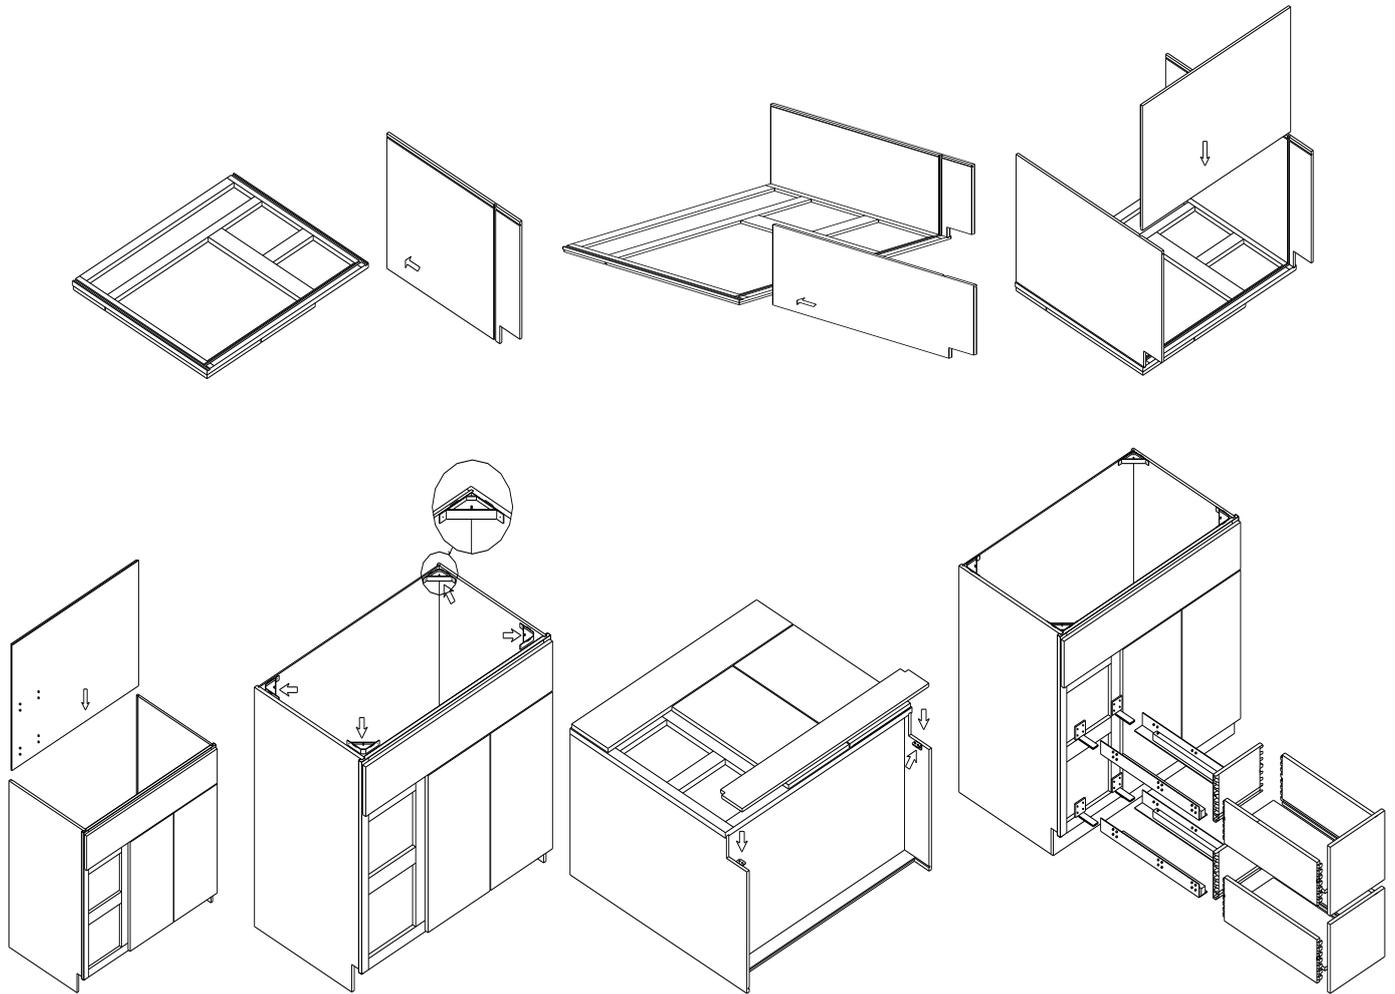

1. Slide the two side panels into the grooves of the FACE FRAME.
2. Next slide in the bottom panel. Make sure the panel is pushed as far down as it can go.
3. Attach the grey brackets onto the back panel and slide it into the grooves on the backside of the side panels. Start from the top and push down toward the bottom of the cabinet.
4. Assemble the drawer using wood glue and a rubber mallet. Then slide the rails into the brackets on the back panel and screw the front of the rails into the face frame.
5. Add on the toekick onto the bottom of the cabinet using L-brackets.
6. (Optional)- Screw on plastic corner brackets.

Wall Cabinet Assembly Instructions


Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

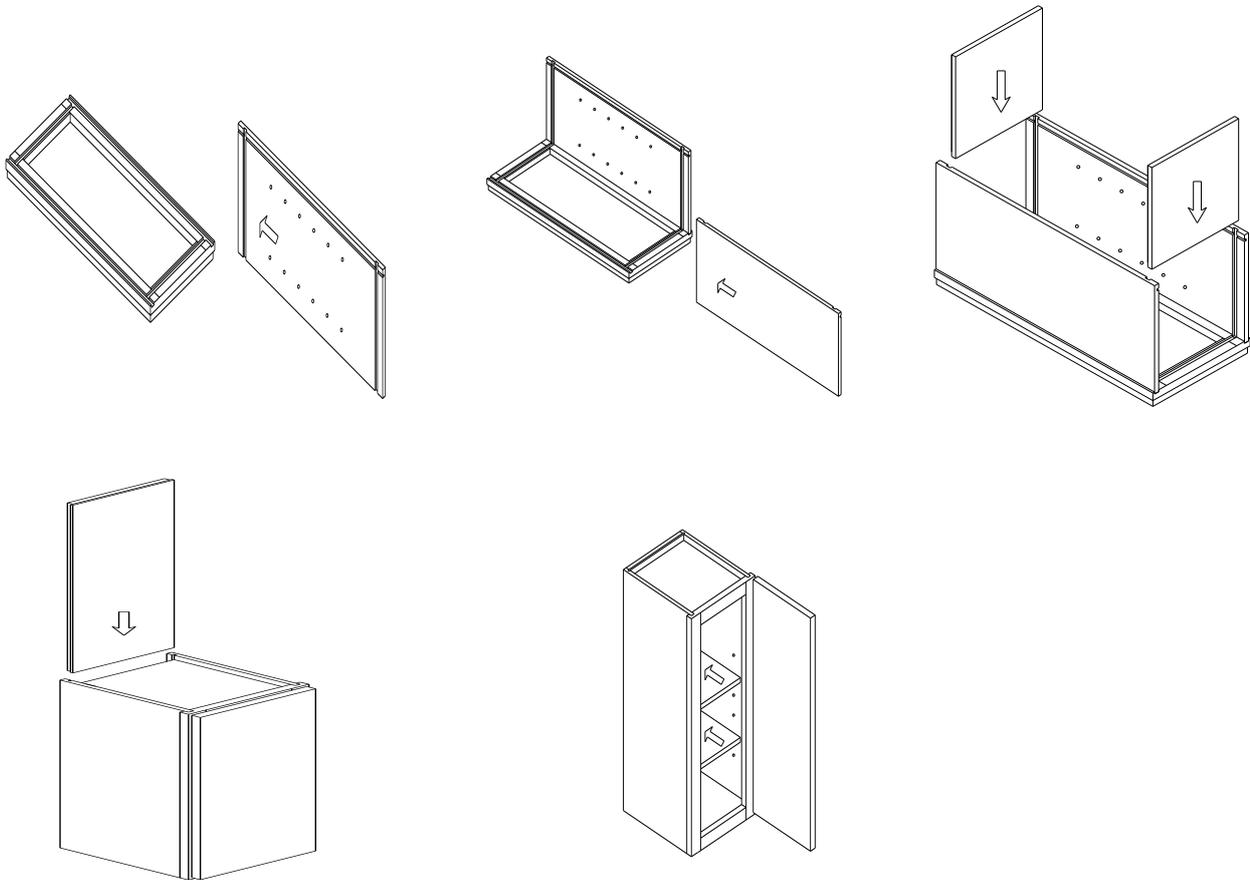

1. Slide on both side panels onto the face frame of the cabinet.
2. Insert the top and bottom panels into the grooves. Push them down as far as they can go.
3. Slide in back panel. Once slid in, drill in long screws to secure the back panel to the three panels within the cabinet.
4. Attach L brackets to secure the frame to the cabinet.
5. Insert shelf clips into the side panels and put in shelves.

Diagonal Wall Corner Cabinet (Cam Lock)


Items Needed: Rubber Mallet a flat-head screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

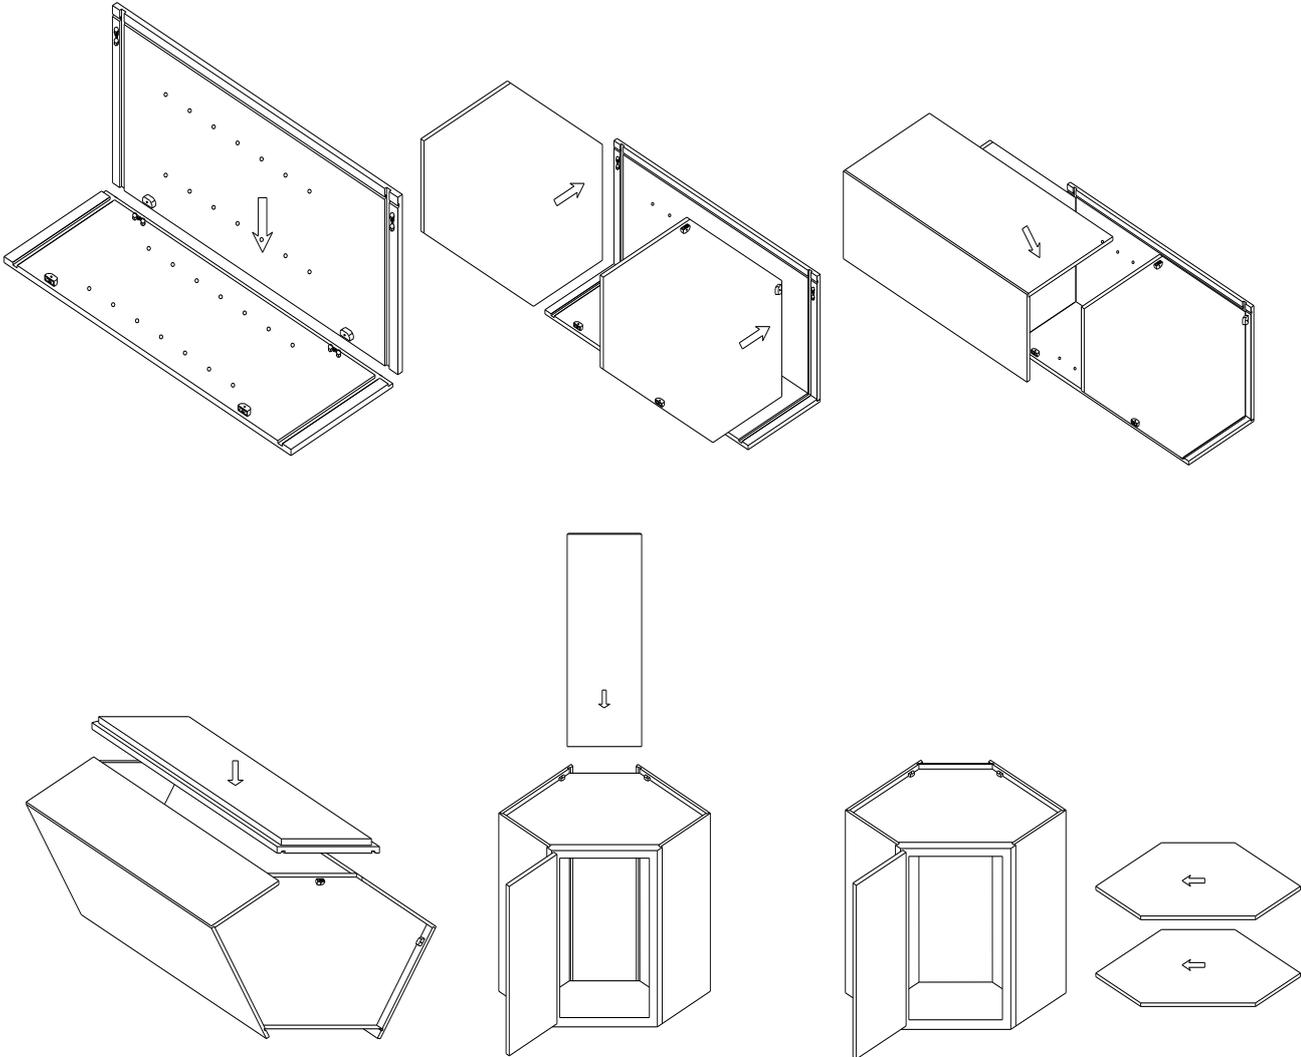

1. Line up the grooves of the side panels, 1 wide one and one narrow one. Make sure all the cam locks are open. Lock the two sets of side panels together.
2. Next take 1 set of side panels and attach the hexagon tops and bottoms by interlocking the cam locks.
3. Carefully attach the second set of side panels onto the other side of the top and bottom panels.
4. Put the doorframe onto the side where cam locks are showing. Lock the top and bottom cam locks first before locking the ones within the cabinet frame.
5. Slide in back panel. May need to hammer a little bit to fully slide it down.
6. Insert shelf pins and shelves.

Wall Microwave Assembly Instructions

Items Needed: Drill, Rubber Mallet, and for some cabinets, a screwdriver. (Optional)- Nail Guns, Wood Glue, Stapler

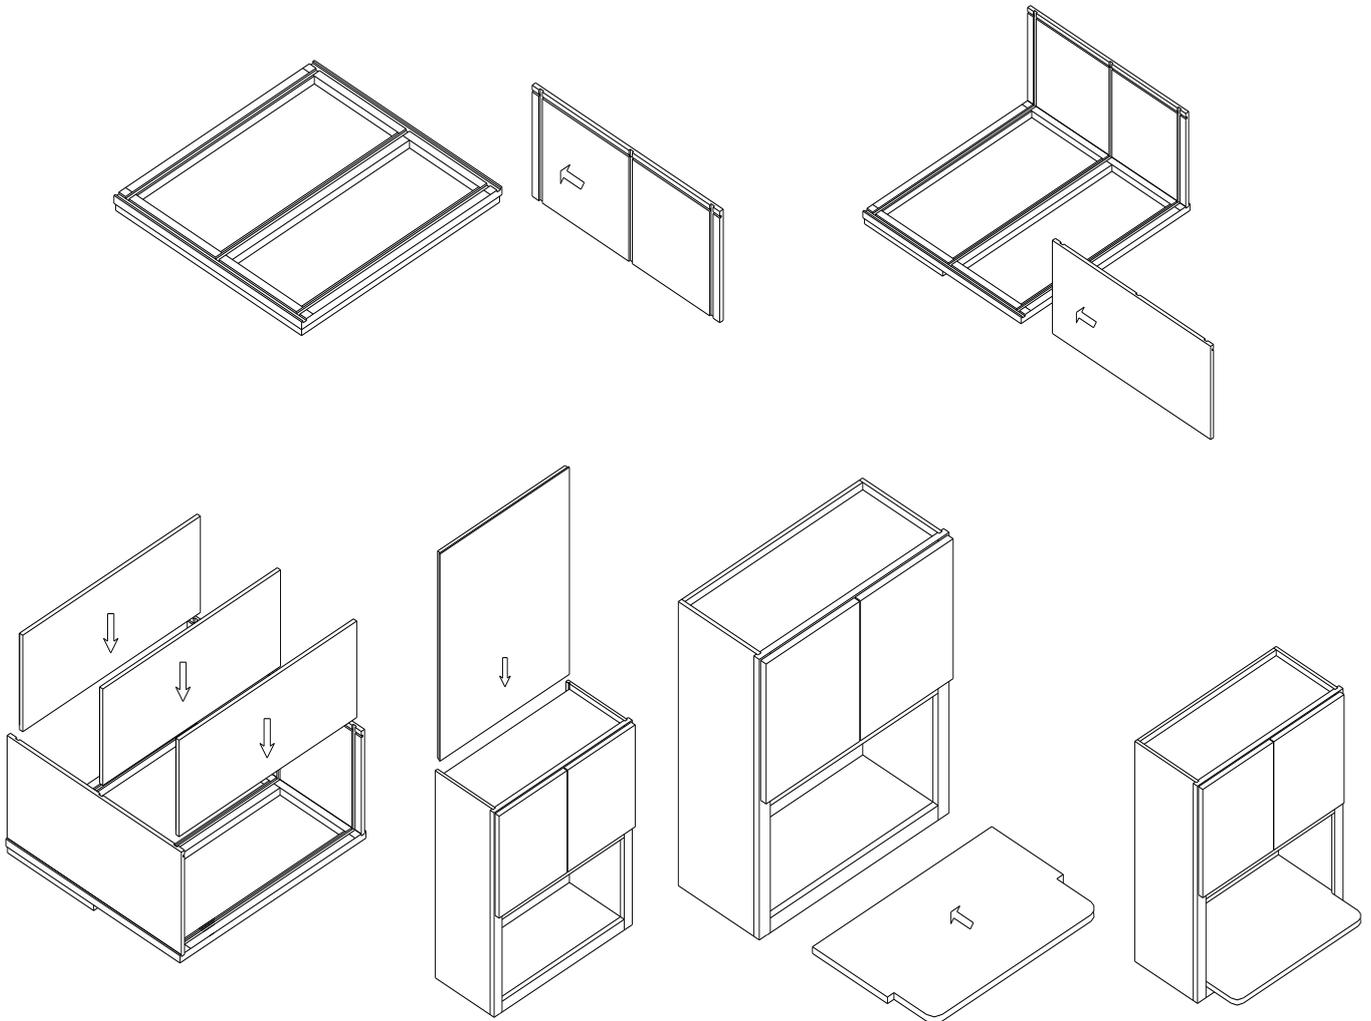

1. Slide on both side panels onto the face frame of the cabinet.
2. Insert all three panels into the grooves. Push them down as far as they can go.
3. Slide in back panel. Once slid in, drill in long screws to secure the back panel to the three panels within the cabinet.
4. Slide bottom piece into the cabinet. Put microwave on top of that piece.
5. Attach L brackets onto the top and bottom part of frame to secure the frame to the cabinet box.